

Shuttle Screen Lock

User Manual

2021.3.23

Index

Pre-preparation	3
Shuttle XPC series hardware	3
Hardware and Software requirements	3
Installation.....	4
Execute the ScreenLockSetup	4
User Management of Shuttle Screen Lock	7
User management.....	7
Operation of Shuttle Screen Lock.....	9
Screen lock.....	9
Unlock the screen.....	9
Close the Screen lock.....	10

Pre-preparation

Shuttle XPC series hardware

Shuttle Screen Lock software only supports to be installed and used on Shuttle XPC series products.

Hardware and Software requirements

Shuttle Screen Lock software requirements as below list:

1. Hardware
 - (1) Camera: At least one camera is required
2. Software:
 - (1) OS: Window 7 or Windows 10
 - (2) Framework: [Microsoft .NET Framework 4.6.1 +](#) (Windows 7 only)
 - (3) Package: [Microsoft Visual C++ redistributable packages](#)
 - (4) Graphics Driver: The latest version of the graphics card driver


Note: Please pre-install the Framework and Package before install the Shuttle Screen Lock Software.

Installation


Execute the ScreenLockSetup

Double click the ScreenLockSetup.msi to start the installation flow.


1. Press “Next” to continue

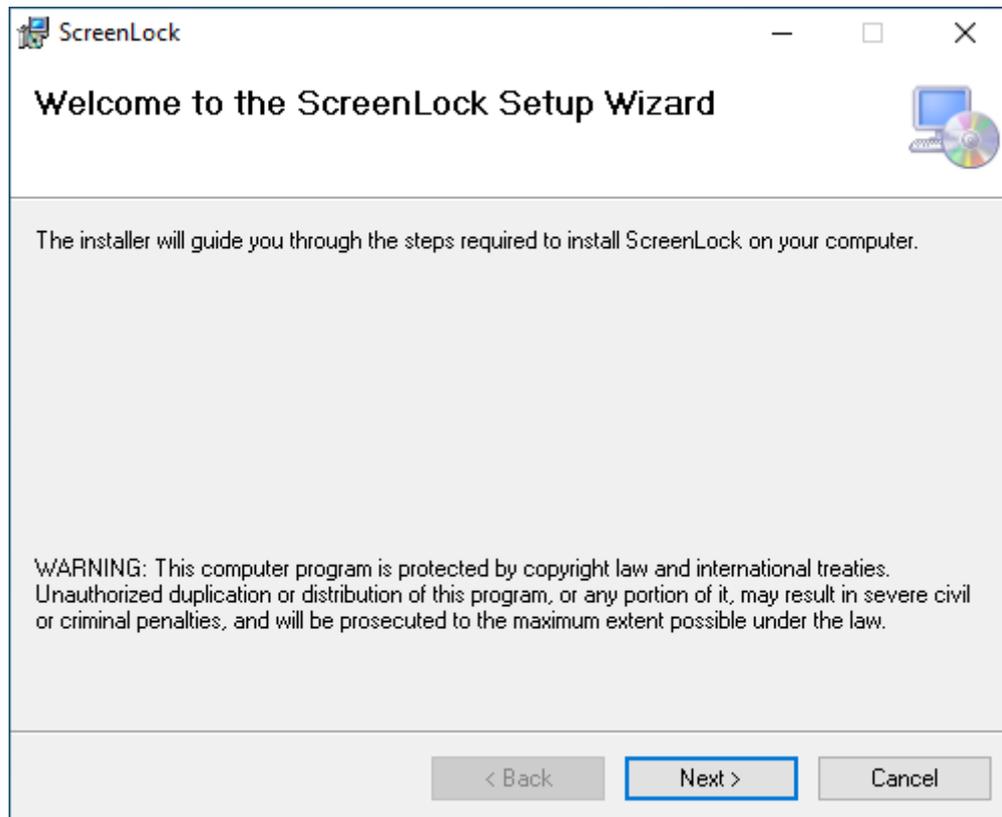


2. Select installation folder and press "Next" to continue

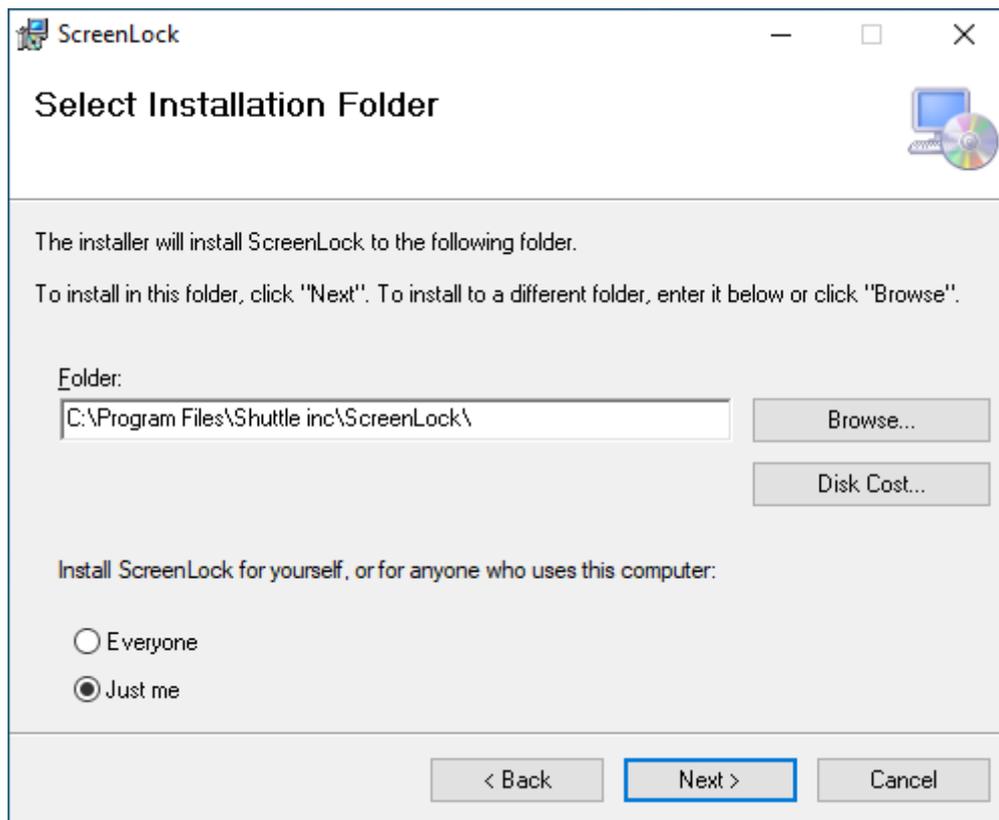


3. Confirm installation and press "Next" to continue

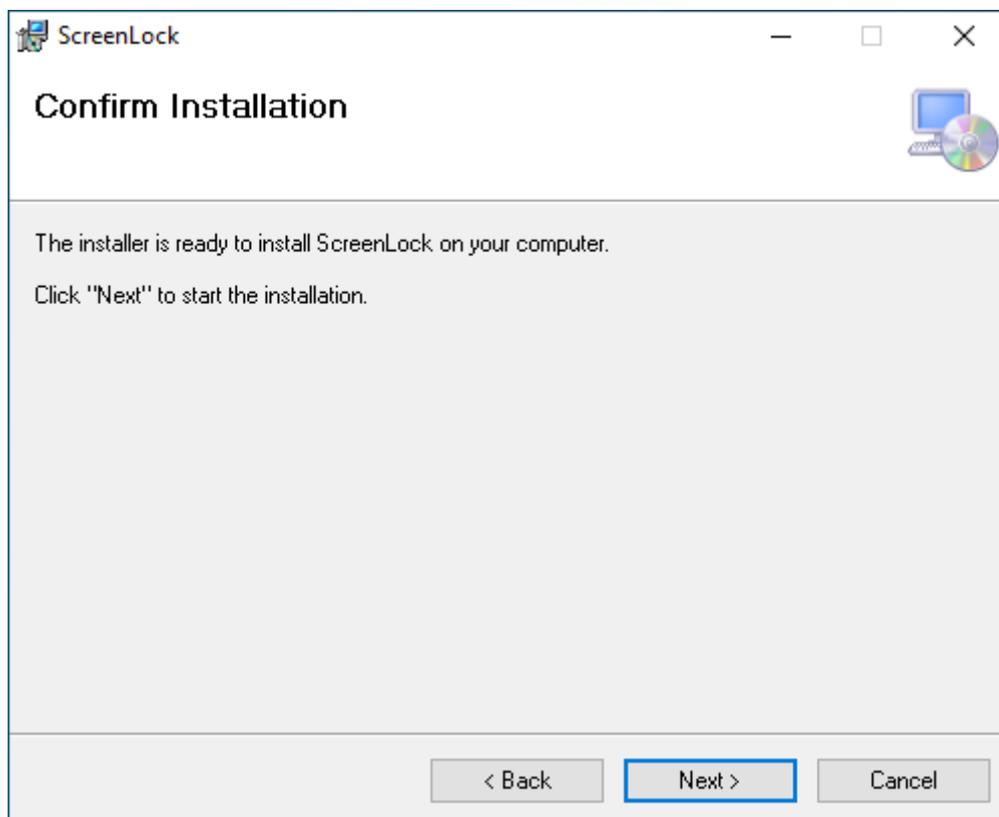

4. Press "Close" to complete the installation

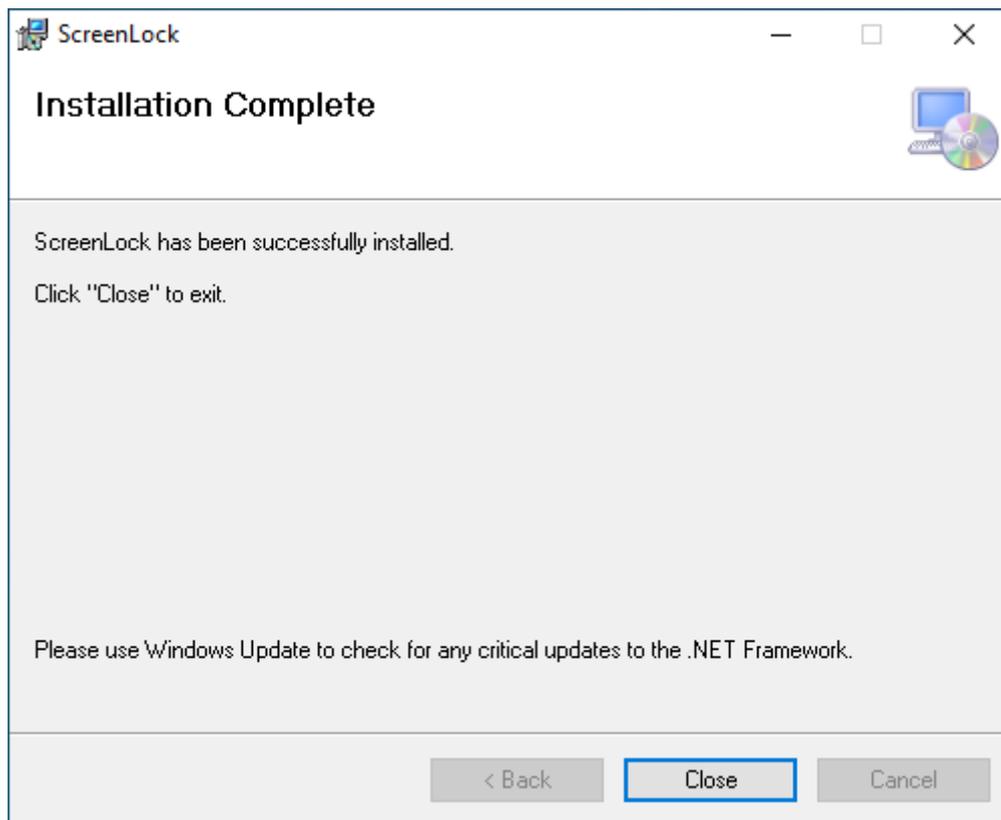


5. Click "ScreenLock" icon on desktop to execute the application

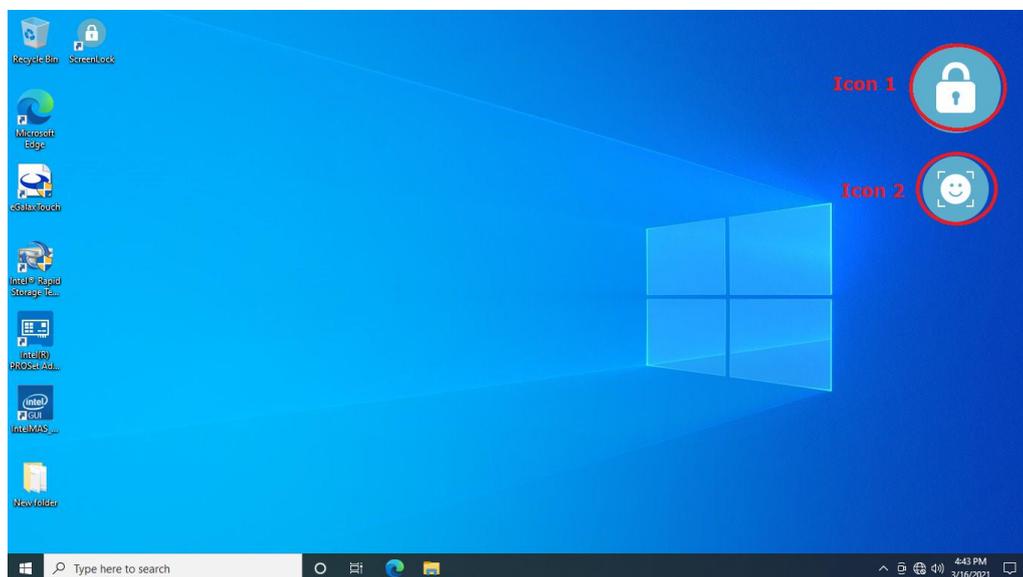

Note: Screen lock operations are located at the upper right of the screen, which are the functions of locking the screen (Icon 1) and user management (Icon 2).


User Management of Shuttle Screen Lock

Press Icon 2 to run user management function

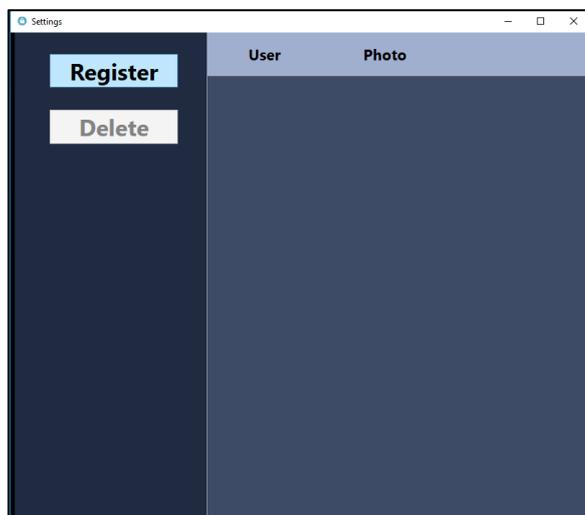

User management

1. Register user
 - (1) Press "Register" button to register new user account.
 - (2) Input the account Name:
The name will be displayed on the screen when the screen is successful unlocked.
 - (3) Upload the face picture by photo or camera.
Upload the face picture by file or open camera to capture the image for facial recognition to unlock the screen.

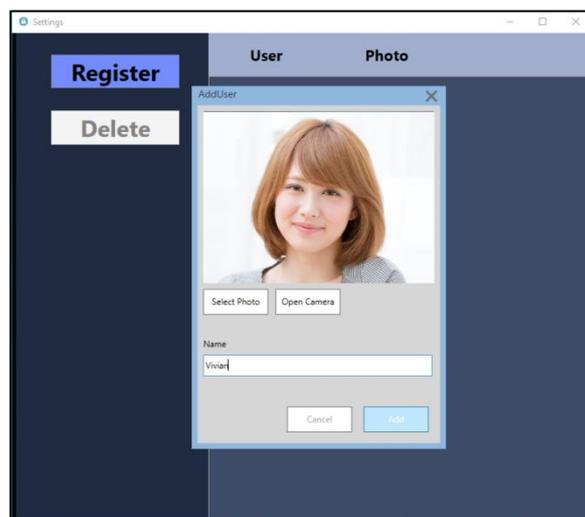


Error message:

1. **Unable to register image:** there is no face found in image or the image quality is not good enough to register face.
2. **The User ID already exist:** the account name is already exist in the application.

Note: The length of the name is limited to 20 characters, and only alphanumeric characters, "-", "_" and "SPACE" is accepted

2. Delete user


- (1) Select the user to be deleted.
- (2) Press "Delete" button to delete user.
- (3) When dialog shows, press "OK" button to confirm deleting the user.

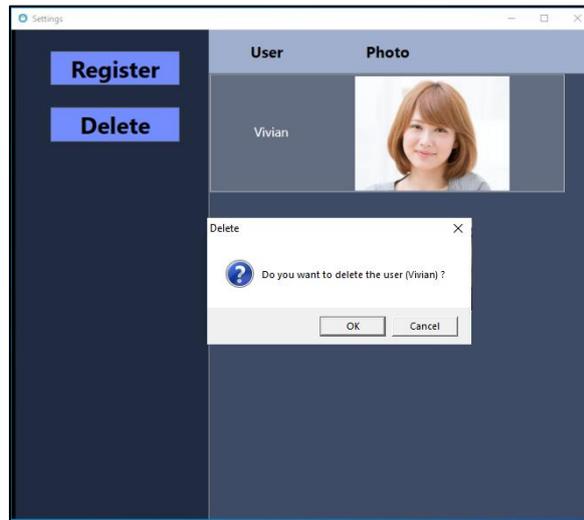

Operation of Shuttle Screen Lock


Screen lock

Press the lock icon (Icon 1) to lock the screen to prevent unauthorized users to use the system.

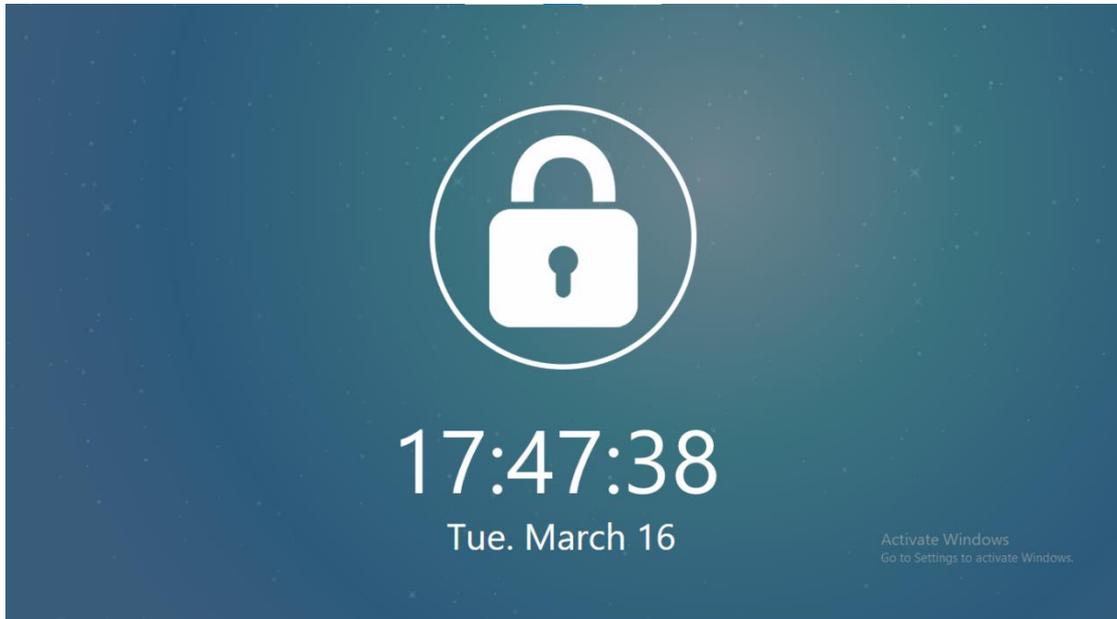


Unlock the screen

The registered users can unlock the screen through facial recognition and the user's name will display on the screen.

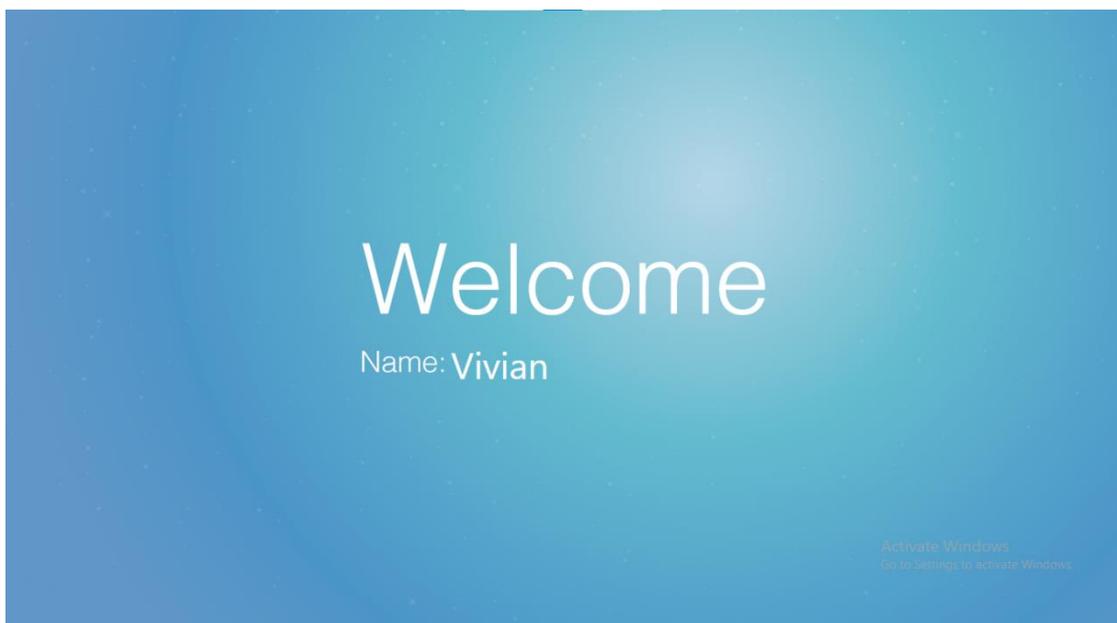

Close the Screen lock

Run "taskmgr" from the Run Box or "Task Manager" on Start Menu

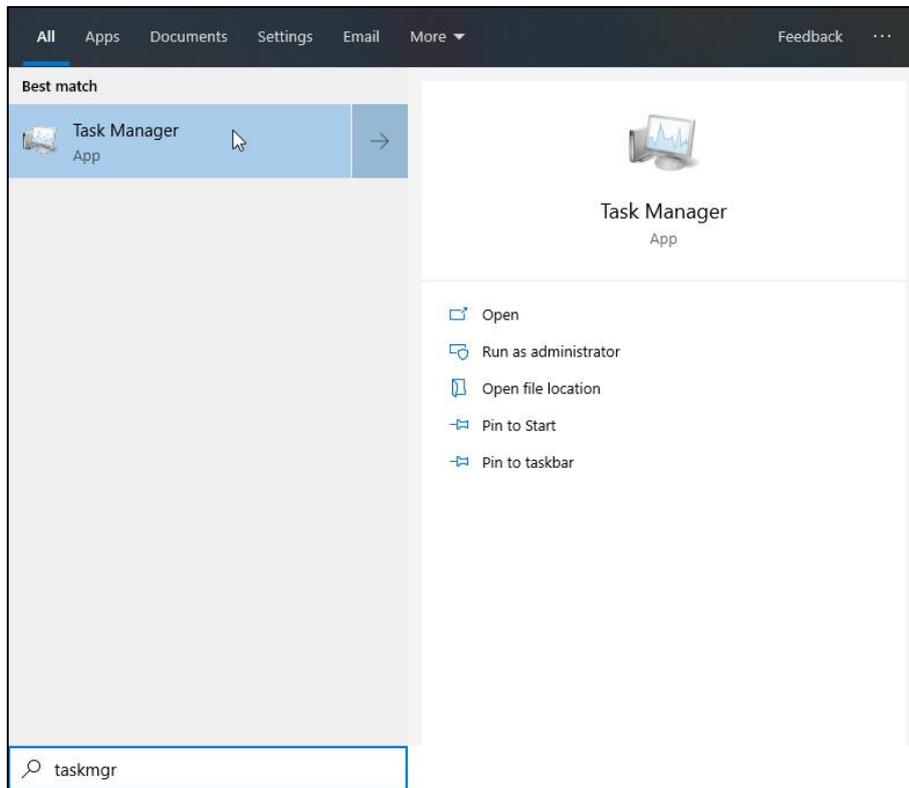

Right click on "ScreenLock" and select "End task" to close the program

