

More information on this product can be found at: <https://bit.ly/SB860R8>  
 更多本產品資訊, 請查閱: <https://bit.ly/SB860R8>  
 Weitere Informationen zu diesem Produkt finden Sie unter: <https://bit.ly/SB860R8>  
 Pour plus d'informations sur ce produit, visitez: <https://bit.ly/SB860R8>


Puede encontrar más información sobre este producto en: <https://bit.ly/SB860R8>  
 本製品の詳細な情報については、次のURLよりご確認ください。 <https://bit.ly/SB860R8>  
 Для получения дополнительной информации об этом продукте перейдите по ссылке: <https://bit.ly/SB860R8>  
 更多本產品信息, 請訪問: <https://bit.ly/SB860R8>

Product Overview

產品外觀 \ Produktübersicht \ Présentation du produit \ Resumen del producto \ 製品概要 \ Обзор продукта \ 产品外观



- 1. USB 2.0 ports
- 2. USB 3.2 Gen1 Type-A port
- 3. Microphone jack
- 4. Headphone jack
- 5. USB 3.2 Gen1 Type-C port
- 6. Power button
- 7. Power LED
- 8. Hard disk drive LED

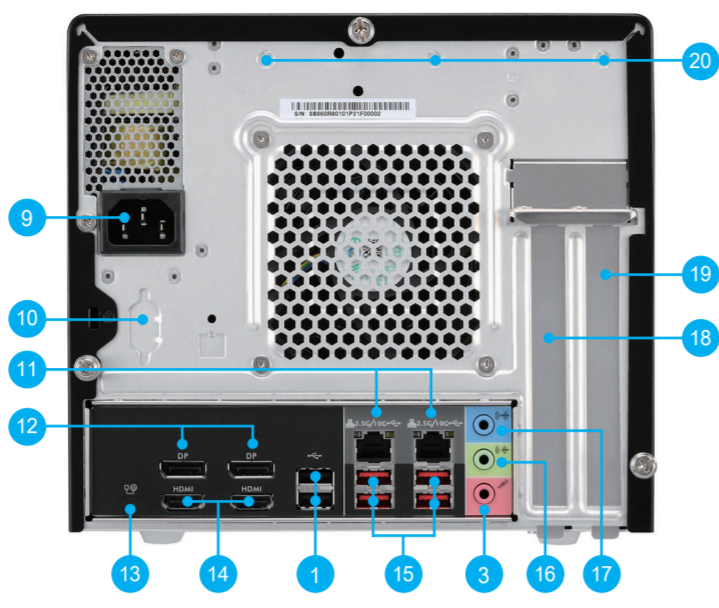

- 9. AC power socket
- 10. Serial port (optional)
- 11. LAN ports
- 12. DisplayPort
- 13. Clear CMOS & Power Button & +5V
- 14. HDMI 2.1b ports
- 15. USB 3.2 Gen2 Type-A ports
- 16. Front speaker out (L/R) port
- 17. Line-in port
- 18. PCIe x16 slot
- 19. PCIe x4 slot
- 20. Perforation for optional WLAN


Hardware Installation

硬體安裝 \ Hardware Installation \ Installation du matériel \ Instalación de hardware \ ハードウェアのインストール \ Установка оборудования \ 硬件安装

A. Begin Installation

For safety reasons, please ensure that the power cord is disconnected before opening the case.


1. Unscrew 3 thumbscrews of the chassis cover.
2. Slide the cover backwards and upwards.

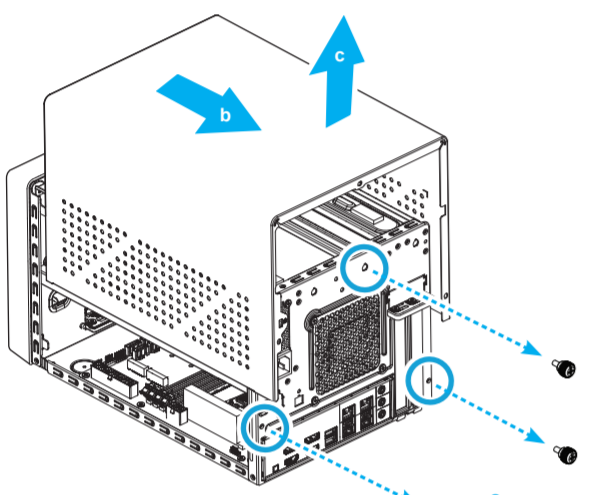

3. Remove EPE1, the thermal module, and EPE2 from the chassis.
4. Unfasten the rack mount screws and remove the rack.

The product's colour and specifications may vary from the actually shipped product.

5. Unfasten the thermal module fan mounting screw and set it aside.

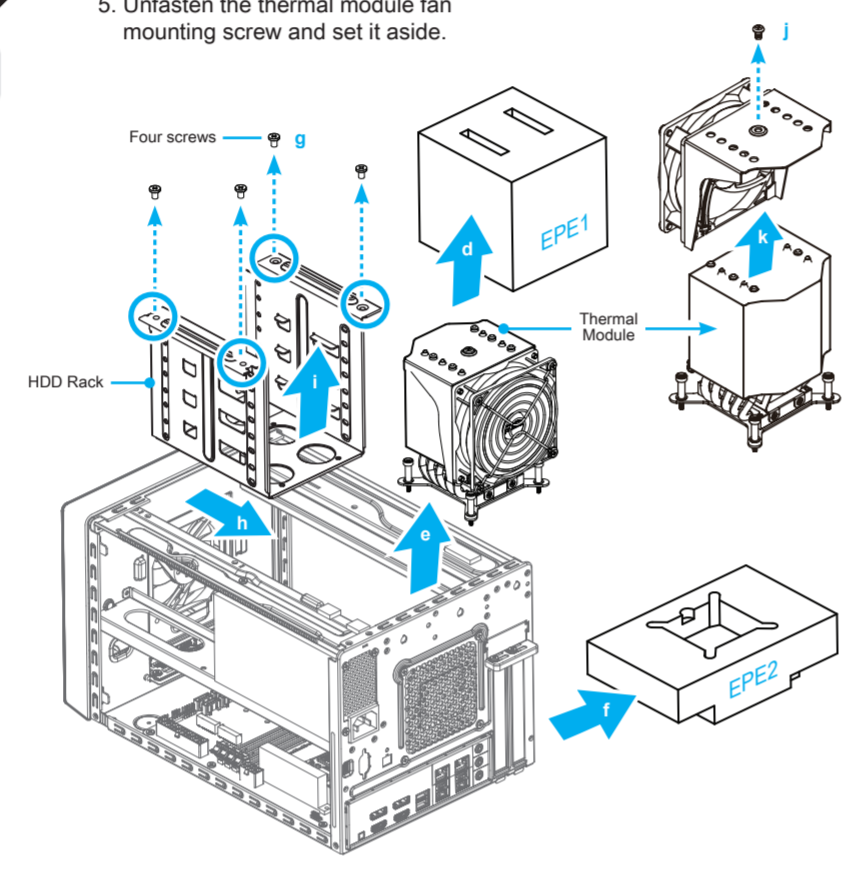


B. CPU Installation


This CPU socket is fragile and can easily be damaged. Always use extreme care when installing a CPU and limit the number of times you remove or change the CPU. Before installing the CPU, make sure to turn off the computer and unplug the power cord from the power outlet to prevent damage of the CPU.

- Follow the steps below to correctly install the CPU into the motherboard CPU socket.

1. Unlock and raise the socket lever.

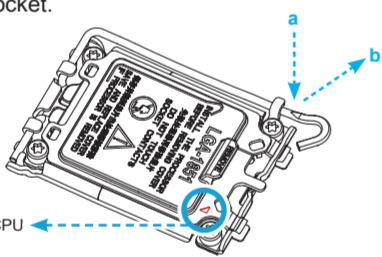


2. Lift the metal load plate off the CPU socket.

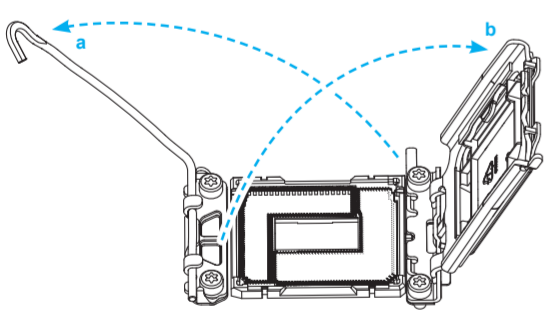


DO NOT touch the socket contacts. To protect the CPU socket, always use the protective socket cover when the CPU is not installed.

3. Please orientate the CPU correctly and align the CPU notches with the socket alignment keys. Make sure the CPU sits perfectly horizontal, then push it gently into the socket.

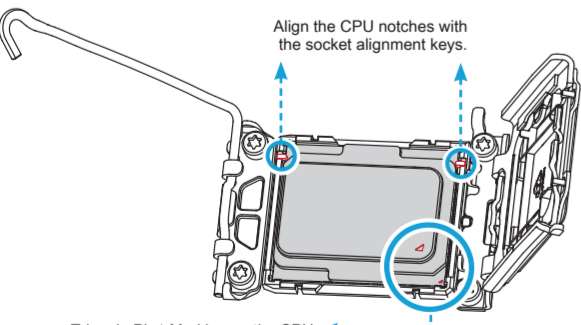


Please be aware of the CPU orientation, DO NOT force the CPU into the socket to avoid bending of pins on the socket and damage of CPU!

4. Close the metal load plate, lower the CPU socket lever, lock it in place, and remove the protective socket cover from the metal load plate.

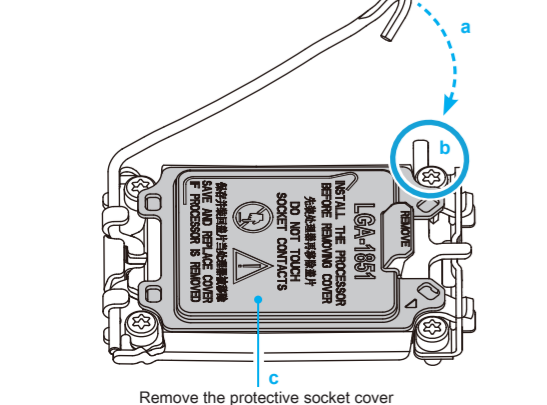

5. Spread thermal paste evenly on the CPU surface.

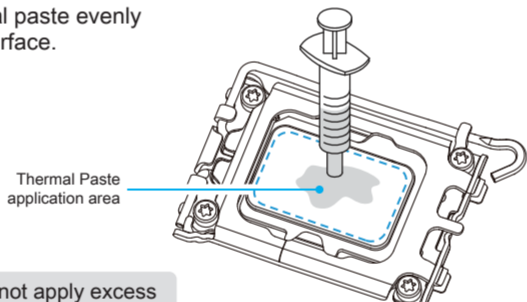

Please do not apply excess amount of thermal paste.

C. Memory Module Installation

Guidelines for Memory Configuration  
 Before installing DIMMs, read and follow these guidelines for memory configuration.


Make sure that the motherboard supports the memory. It is recommended that memory of the same capacity, brand, speed, and chips is used. (Go to Shuttle's website for the latest memory support list.) Memory modules have a foolproof design. A memory module can be installed in only one direction. If you are unable to insert the module, reverse direction.

Installing memory modules

If only 1 DDR5 module need to be installed, please install the module in A2 or B2 slot for your first priority. Follow the steps below to correctly install your memory modules in the memory sockets.


Population rules of dual channel memory modules

In Dual-Channel mode, the memory modules can transmit and receive data with two data bus lines simultaneously. Enabling Dual-Channel mode can enhance system performance. The following illustrations explain the population rules for Dual-Channel mode.

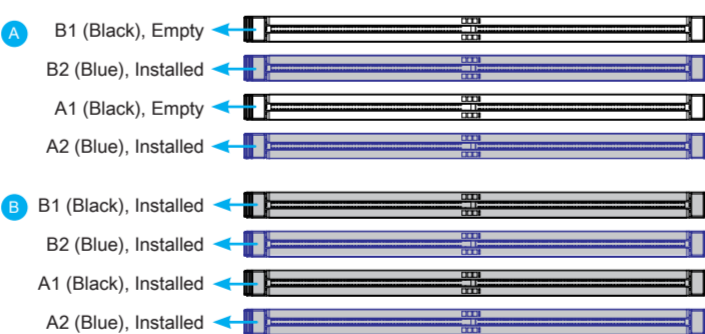

1. Unlock the DIMM latch.
2. Align the memory module's cutout with the notch of the DIMM slot. Slide the memory module into the DIMM slot.

A DDR5 memory module has a cutout, so it only fits in one direction.


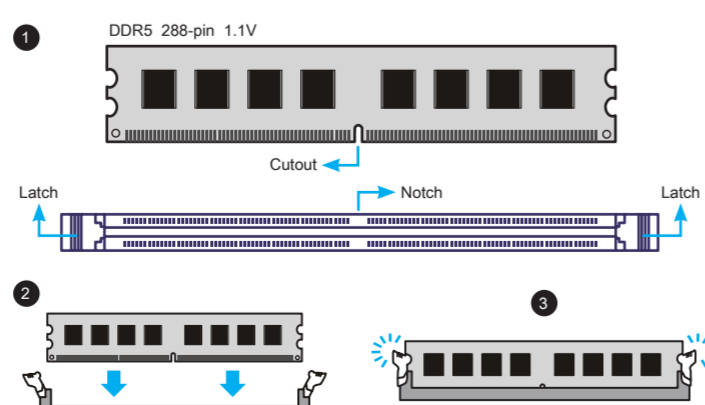


3. Check if the latches are closed and if all memory modules are firmly installed.

Repeat the above steps to install additional memory modules, if required.

D. M.2 Device Installation


1. Locate the M.2 key slots on the motherboard.
2. Install the M.2 device into the M.2 slot and secure with the screw.

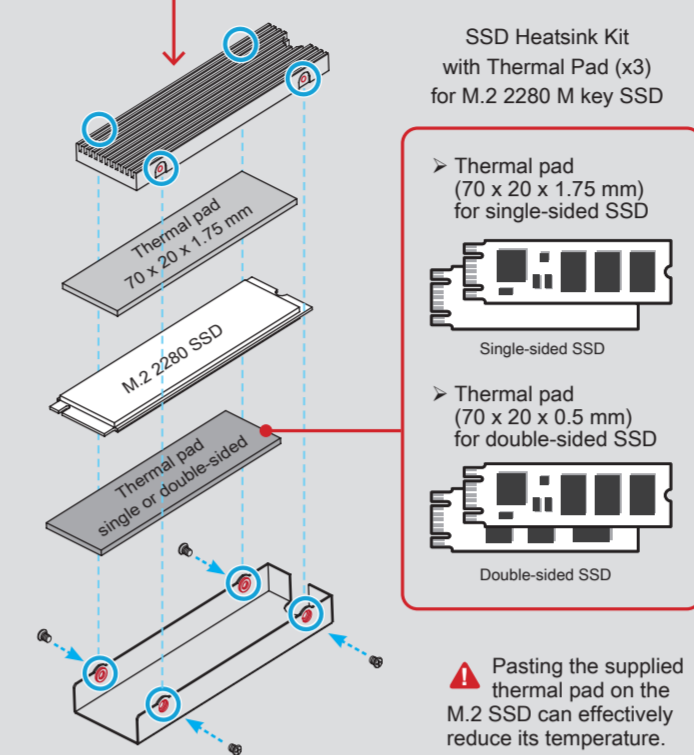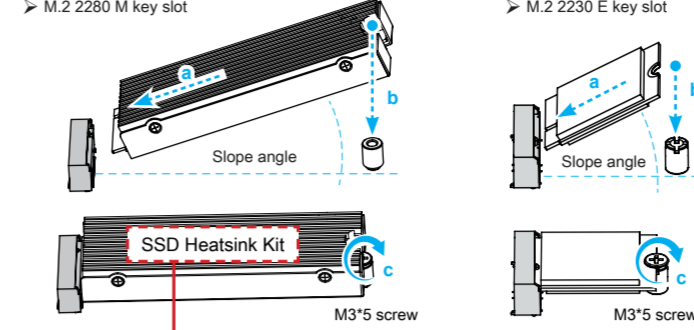


Pasting the supplied thermal pad on the M.2 SSD can effectively reduce its temperature.

E. Installation of Drives


1. Place the HDD or SSD in the rack and secure with screws from the sides.

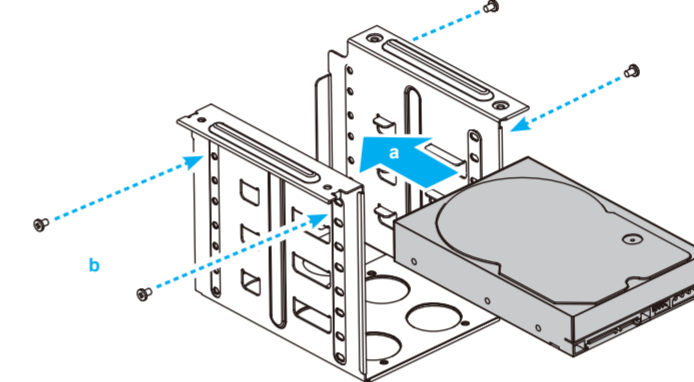

2. Connect the Serial ATA cable to the motherboard.

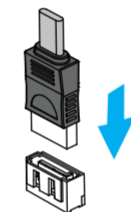

3. Place the rack in the chassis and refasten the rack.
4. Connect the Serial ATA and power cables to the HDD or SSD.

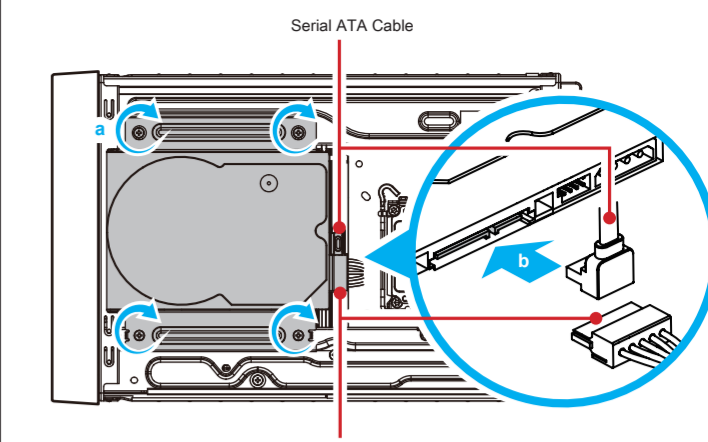


5. Repeat the previous steps to install three further 3.5" drives. The R8 chassis allows for a total of four 3.5" drives to be installed.

F. Installation of Thermal Module

Follow steps a through h to install the thermal module onto the motherboard.

Use a hexagonal screwdriver to tighten the thermal module onto the motherboard.

Be sure to press down on the opposite diagonal corner while tightening each push-pin.

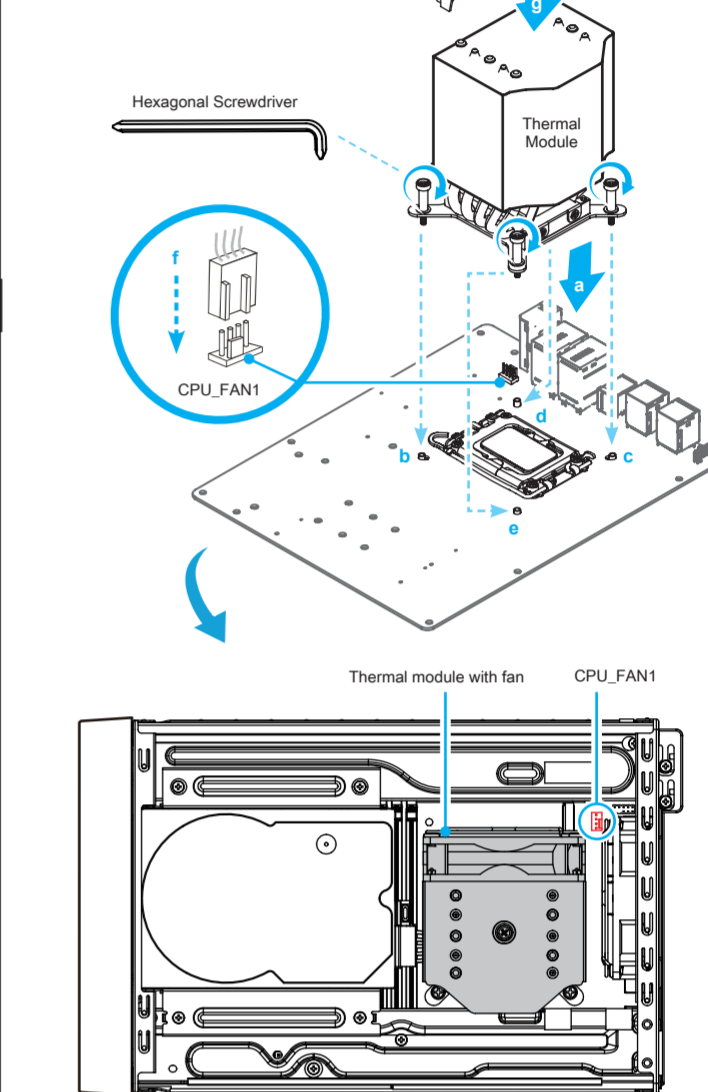


B. CPU Installation


This CPU socket is fragile and can easily be damaged. Always use extreme care when installing a CPU and limit the number of times you remove or change the CPU. Before installing the CPU, make sure to turn off the computer and unplug the power cord from the power outlet to prevent damage of the CPU.

- Follow the steps below to correctly install the CPU into the motherboard CPU socket.

1. Unlock and raise the socket lever.

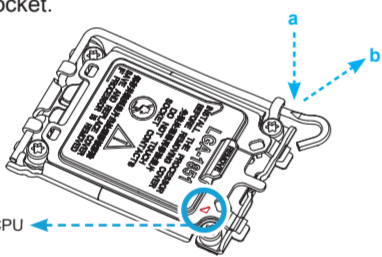


2. Lift the metal load plate off the CPU socket.

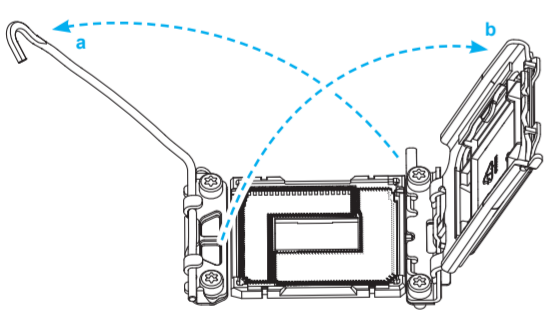


DO NOT touch the socket contacts. To protect the CPU socket, always use the protective socket cover when the CPU is not installed.

3. Please orientate the CPU correctly and align the CPU notches with the socket alignment keys. Make sure the CPU sits perfectly horizontal, then push it gently into the socket.

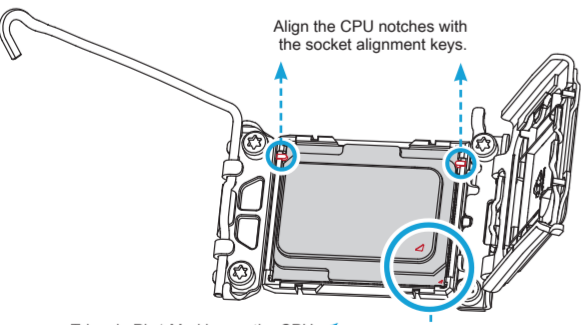

Please be aware of the CPU orientation, DO NOT force the CPU into the socket to avoid bending of pins on the socket and damage of CPU!


4. Close the metal load plate, lower the CPU socket lever, lock it in place, and remove the protective socket cover from the metal load plate.

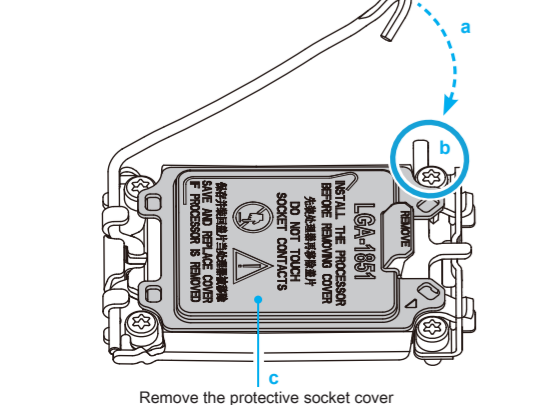


G. Installation of Expansion Cards

1. Unfasten the expansion slot bracket screws. Remove the back panel bracket and put it aside.

The maximum size acceptable for display cards is 280 mm (L) x 120 mm (H)S x 40 mm (D).

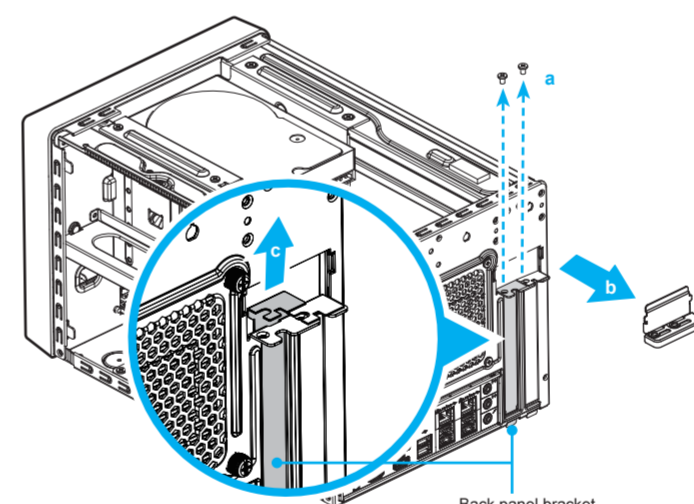

2. Install the PCIe x4 / PCIe x16 card into the PCIe x4 / PCIe x16 slots.

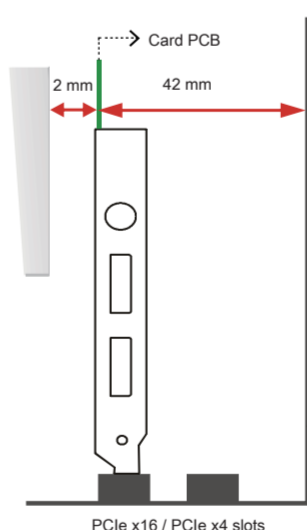

3. Secure the bracket.

Safety Information

Incorrectly replacing the battery may damage this computer. Replace only with the same or equivalent as recommended by Shuttle. Dispose of used batteries in accordance with the laws of your country.

更換電池方式錯誤可能會損壞本電腦以及引發爆炸、火災或其他危險。僅能依 Shuttle 的建議, 以相同或同等電池更換。請根據您所在國家/地區的法律規定處理廢電池。

Das unkorrekte Austauschen der Batterie kann diesen Computer beschädigen. Ersetzen Sie die Batterie nur durch den gleichen Typ oder ein gleichwertiges, von Shuttle empfohlenes Modell. Entsorgen Sie gebrauchte Batterien gemäß den gesetzlichen Vorschriften in Ihrem Land. Ne pas remplacer correctement la pile peut endommager l'ordinateur. Remplacez-la uniquement par un modèle identique ou un équivalent comme recommandé par Shuttle. Éliminez les piles usagées conformément à la législation en vigueur dans votre pays.

La sustitución incorrecta de la batería puede dañar este equipo. Sustituya la batería únicamente por una igual o equivalente recomendada por Shuttle. Elimine las pilas usadas de acuerdo con los requisitos legales de su país.


バッテリーを間違えてセットすると、このコンピュータが損傷の原因となります。交換する際は、Shuttle が推奨するバッテリーと同じものまたは同等のものだけを使用するようにしてください。使用済みのバッテリーは、お住みの国の法律に従って処分してください。

Неправильная замена батареи может привести к повреждению компьютера. Батарея должна соответствовать стандарту производителя Shuttle или быть идентичной предыдущей. Утилизируйте использованные батареи в соответствии с законодательством вашей страны.

更換電池方式錯誤可能會損壞本電腦。僅能依 Shuttle 的建議, 以相同或同等電池更換。請根據您所在國家/地區的法律規定處理廢電池。

H. Complete

1. Replace the cover and tighten the thumbscrews, then connect the power cord.
2. Complete.

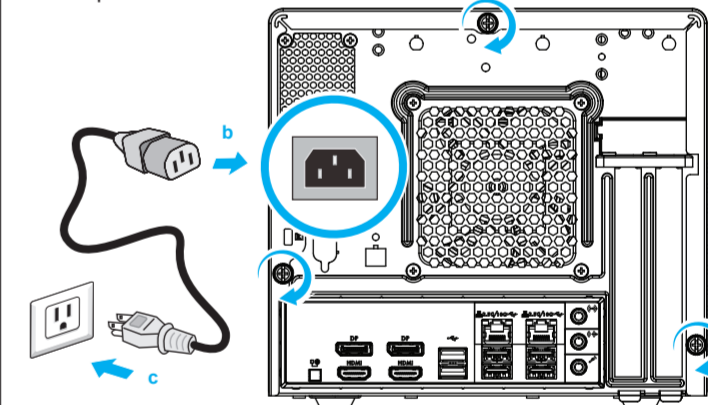

Please press the "Del" key while booting to enter BIOS. Here, please load the optimised BIOS settings.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This device meets the requirements for the EU conformity in accordance to the currently valid EU directives. Dieses Produkt erfüllt die Anforderungen für die EU-Konformität entsprechend der aktuell geltenden EU-Richtlinien. Ce produit répond aux exigences de la conformité UE suivant les directives européennes actuellement en vigueur.

All bundled parts, power cord included, shall not be used without this product. 電源ケーブル等、すべての付属品は本機以外ではご使用になれません。

注意: 仅适用于在非热带气候条件下安全使用, 在热带气候条件下使用时, 可能有安全隐患。 注意: 允许产品使用的最高环境温度为 40°C。 \* The equipment was evaluated for use in a maximum air ambient temperature of 40°C. 產品宣告最大適用環境溫度為 40°C。 注意: 仅适用于海拔 2000m 以下安全使用, 在海拔 2000m 以上使用时, 可能有安全隐患。

WARNING THIS PRODUCT CONTAINS A BUTTON BATTERY

If swallowed, a lithium button battery can cause severe or fatal injuries within 2 hours. Keep batteries out of reach of children. If you think batteries may have been swallowed or placed inside any part of the body, seek immediate medical attention.

The statement "remove and immediately recycle or dispose of used batteries according to local regulations and keep away from children. Do NOT dispose of batteries in household trash or incinerate."

1. The statement "remove and immediately recycle or dispose of used batteries according to local regulations and keep away from children. Do NOT dispose of batteries in household trash or incinerate."
  - (a) Remove and immediately recycle or dispose of used batteries according to local regulations and keep away from children. Do NOT dispose of batteries in household trash or incinerate.
  - (b) Even used batteries may cause severe injury or death.
  - (c) Call a local poison control center for treatment information.
  - (d) Indicating the compatible battery type CR2032.
  - (e) Indicating the nominal battery voltage.
  - (f) Non-rechargeable batteries are not to be recharged.
  - (g) Do not force discharge, recharge, disassemble, heat above (manufacturer's specified temperature rating) or incinerate. Doing so may result in injury due to venting, leakage or explosion resulting in chemical burns.
2. This Product contains a button Battery/coin cell batteries
  - (a) Ensure the batteries are installed correctly according to polarity (+ and -).
  - (b) Do not mix old and new batteries, different brands or types of batteries, such as alkaline, carbon-zinc, or rechargeable batteries.
  - (c) Remove and immediately recycle or dispose of batteries from equipment not used for an extended period of time according to local regulations.
  - (d) Always completely secure the battery compartment. If the battery compartment does not close securely, stop using the product, remove the batteries, and keep them away from children.

